



RELIEF VALVE SETTING INSTRUCTIONS

1. Remove the cap on the relief valve.



2. Use T-handle wrench to adjust pressure to desired setting.
Turning Clockwise increases the pressure relief setting.
Turning Counter-clockwise decreases the pressure relief setting.



3. Replace the relief valve cap.

