

# 9-6472



Either 'P' port can be used as the inlet.  
Use the other 'P' port as flow through.



Connect the 'T' port to tank.



Connect a pressure gauge to the 'G' port.  
This port can be plugged if not using a gauge.