

Extend

Pull the handle away from the valve to extend the cylinder. In this direction, releasing the handle will spring the handle back to the neutral 'off' position stopping the cylinder.

Retract

Push the handle towards the valve to retract the cylinder. Pushing the handle into the detent position will allow hands-free return of the cylinder. When the cylinder is fully retracted, the handle will kick-out to the neutral 'off' position of the valve.

Work Ports

The work ports are located on the bottom of the valve.

