


For CW Rotation: Connect +12 Volts DC to Post 2. Jumper Post 1 and Post 3 together. The negative lead should be grounded to the body of the motor.

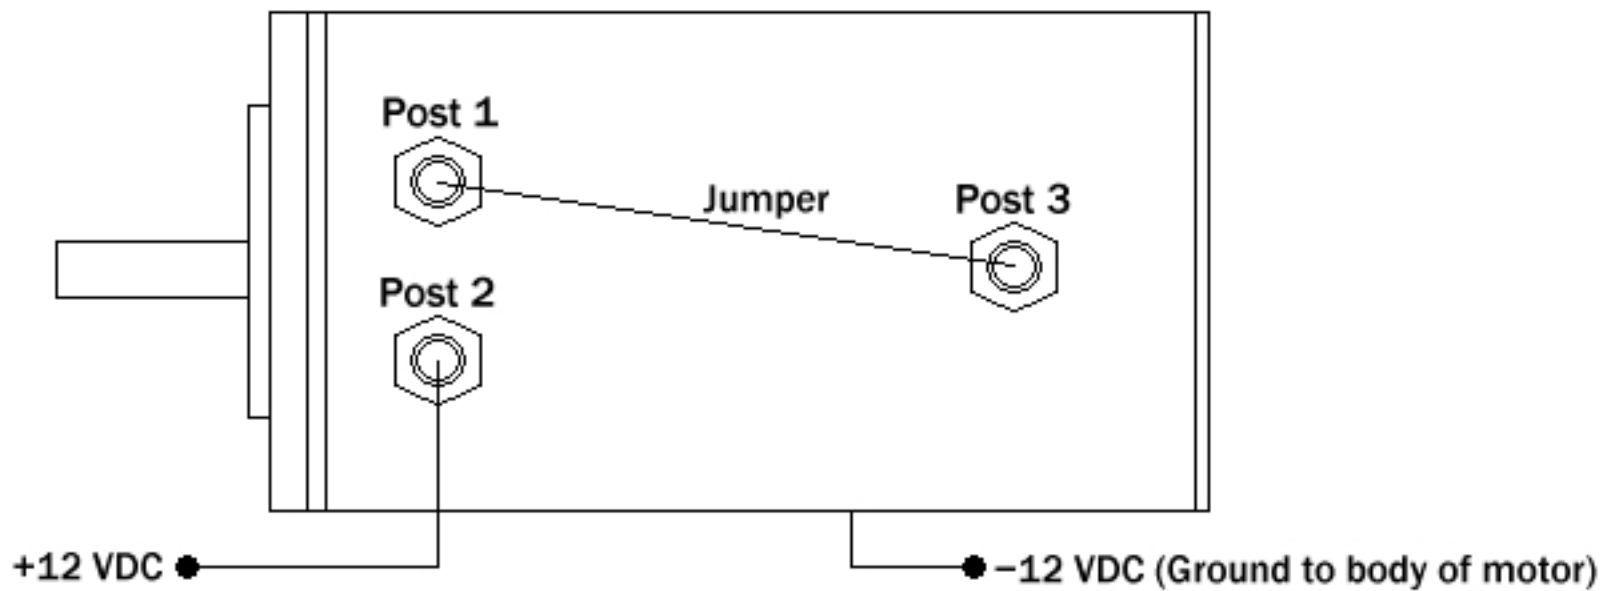

For CCW Rotation: Connect +12 Volts DC to Post 1. Jumper Post 2 and Post 3 together. The negative lead should be grounded to the body of the motor.

